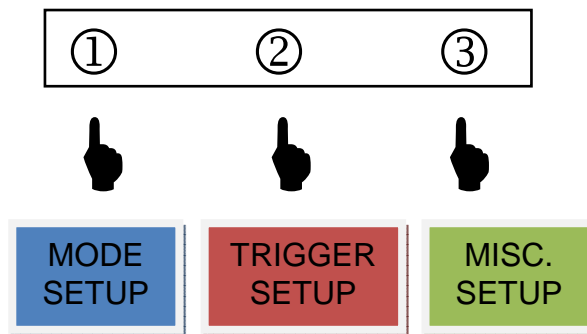


**SETUP WITH SWITCHES, for software version BBOXPP01MUTE**

SHUT DOWN THE POWER

RESTART THE POWER WHILE HOLDING ONE SWITCH PRESSED

Wait 5 sec and RELEASE THE SWITCH,  
led flashes, beep...beep...beep

**IF YOU HAVE PRESSED "MODE SETUP"**  
NOW, PRESS A SWITCH AGAIN TO CHOSE A **MODE**



① MODE 2, single track

② MODE 1, continuous player

③ MODE 3, loop and event

-Single track, when it has been started, a track is played and the device stops at the end of this track.

-Continuous, all the tracks on the card are played after each other, the player never stops.

-Loop and event, the first track is repeated forever, when a trigger occurs, an alternate track is played, when this one is finished, the player restart looping the first track.

**OR IF YOU HAVE PRESSED "TRIGGER SETUP"**  
*PRESS A SWITCH AGAIN TO CHOSE A TRIGGER SETUP*



DIRECT (trig 1 play 1, trig 2 play 2 ...)



CD PLAYER. (next / prev / VOL- / VOL+ )



RANDOM 1 / RANDOM / SEQ.

-Direct, each of the 4 input trigger start a different track.

-CD player, input 1 is for next track, input 2 is for previous track,  
input 3 is for volume down, input 4 is for volume up.

-Random, input 1 start track 1, input 2 start a random track, input 3 and 4 are for next and previous track

**OR IF YOU HAVE PRESSED "MISC. SETUP"**  
*PRESS A SWITCH AGAIN TO CHOSE BETWEEN N.O., N.C. or 15 coded inputs*



4 TRIGGERS, NORMALY OPEN, must be closed to start



4 TRIGGERS, NORMALY CLOSED, must be open to start



15 TRIGGERS N.O. and binary coded,  
ex: Closed | Open | Closed | Closed, will start track 11

To apply different setups, you must power down and restart the process from the beginning.

BBOX screw terminals

+12V	INPUT 4	INPUT 3	INPUT 1	INPUT 2	GND	+ 5V
------	---------	---------	---------	---------	-----	------

Closing an input means connecting to +12V